

## **Application note:**

Thread adapter for fixed connection of cone adapter (18/8) and smoke column.

The enclosed thread adapter is first screwed hand-tight (approx. 3Nm) to the cone adapter. Then the cone adapter with the mounted thread adapter is screwed into the smoke column without force (<1Nm).

### **Note:**

If the thread adapter is not properly screwed to the cone adapter, it may come loose during disassembly and must be removed from the smoke column manually.

## **Warning:**

Threads are sharp-edged!

To screw and unscrew the thread adapter, use only the cross hole in the thread adapter and a screwdriver (or similar) with 3mm diameter.

When screwing and unscrewing the cone adapter with the smoke column, protect your hand (e.g. use gloves).