



Assembly of optional X-Blow Off and purge adapters

Step 1:

To assemble the X-Blow Off in combination with a sleeve, first unscrew the smoke column from the base. Now screw the X-Blow Off smoke column extension onto your smoke column.

Step 2:


There are two X-Blow Off adapters. One upper and one lower. Now please take the X-Blow Off adapter suitable for the top. This adapter has a slightly tapered hole for the smoke column. Insert the smoke column from above through the hole. At the upper end of the smoke column there is a suitable outer cone which holds the X-Blow Off adapter. Now put a sleeve over the smoke column from below. Then put the lower X-Blow Off adapter over the end of the smoke column and the sleeve.

Step 3:

In the final step, please take the smoke column with the optional sleeve and purge adapter and put it through the Steamulation Sleeve Upgrade Adapter. Then screw the smoke column hand-tight to the base. It is advisable to first grasp the smoke column at the upper end and screw it into the thread a few turns. As soon as the smoke column engages in the thread, please pull the optional purge adapter upwards into the cone. The purge adapter and smoke column can then be easily tightened and loosened together.

Notice:

- The X-Blow Off can only be mounted in conjunction with a sleeve.
- Each X-Blow Off adapter has four different positions. Blocking the blow off is also possible with each adapter. **Do not block the upper and lower adapters at the same time**, otherwise you will block the entire air outlet and the pressure will then have to escape via the smoke column, forcing water upwards.

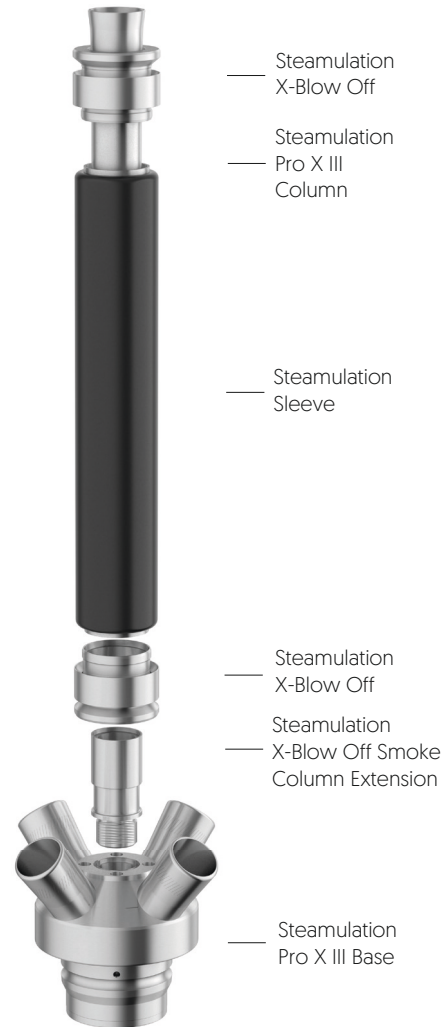

Assembly of optional X-Blow Off + adapters and sleeves

Step 1:

To mount the X-Blow Off in combination with a sleeve, please first unscrew the smoke column from the base. Now screw the X-Blow Off + smoke column extension into the base.

Step 2:

Now take the X-Blow Off + Exhalation Plate in hand. Guide the smoke column from above through the cone-shaped mounting hole. There is a matching outer cone at the upper end of the smoke column, where the plate is centered.

Step 3:

Now guide the smoke column with air outlet plate through the X-Blow adapter and the sleeve to the spacer tube and screw them into the thread. You must guide the X Blow Off Adapter and the sleeve over the smoke column from below. Observe the correct direction of the X Blow Off adapters. The smaller centering diameters of the X Blow Off adapters point towards the sleeve. Make sure that all centerings on the base and sleeve are correctly seated and hand-tighten the smoke column in the base.

Tip: It is recommended to first slightly screw the smoke column into the thread using the inserted 18/8 smoke column adapter. Now grasp the sleeve and pull it upwards so that the smoke column cone grips. Screw the smoke column on hand-tight like this. X-Blow Off Adapter + and smoke column can be easily tightened and loosened without tools.

Notice:

- The X-Blow Off + can only be mounted in conjunction with a sleeve.
- Both X-Blow + adapters of the X-Blow Off + are identical in construction.
- The X-Blow Off + can be combined with the optionally available Cooling Control Adapter.
- Each X-Blow Off adapter has four different switching positions. The blow off plate has 2 switching positions. This results in 31 different blow off combinations. In another switch position all Blow Offs are blocked. **Please do not block all Blow Off options at the same time**, because in this case, depending on the hookah model, the entire air outlet is blocked and the excess pressure in the hookah pushes the water upwards out of the smoke column!

